

## **F12 Setup for Datalogic 1D Scanner Range**

### **Tethered Scanner (Corded)**

1. Plug scanner into the USB port.
2. Wait for the computer to recognize it and report it ready for use.
3. On the following page there is a sequence of rules that must be followed.
4. Scan the barcodes in the following order
  - A. Enter Configuration (Begin Rule)
  - B. One Character Terminator
  - C. Scan Codes 9+0 (represents F12 key)
  - D. Save and Exit Configuration

### **Wireless Scanner (Cordless)**

1. Configure the Scanner to the Base Cradle (Refer to associated Product Reference Manual)
2. Once Scanner is binded to base and USB driver is installed Scanner is ready for use.
3. On the following page there is a sequence of format rules that must be followed.
4. Scan the barcodes in the following order
  - A. Enter Configuration (Begin Rule)
  - B. One Character Terminator
  - C. Scan Codes 9+0 (represents F12 key)
  - D. Save and Exit Configuration


# Advance Datalogic Format Rules

Scan barcodes rules in the order printed

**1. Enter configuration**



**2. One Character Terminator**

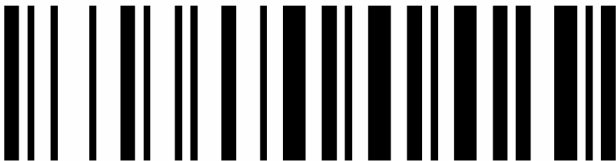

+



9

+



0

Wait for a Confirmed Beep before proceeding to Step 3.

**3. Exit and Save configuration**

