

F12 Setup for Motorola 1D Scanner Range

Tethered Scanner (Corded)

1. Plug scanner into the USB port.
2. Wait for the computer to recognize it and report it ready for use.
3. On the following page there is a sequence of ADF rules that must be followed.
4. Scan the barcodes in the following order
 - A. Erase All Rules
 - B. Begin New Rule
 - C. Send all that remains
 - D. Send Function Key [F12]
 - E. Save Rule

Wireless Scanner (Cordless)

1. Configure the Scanner to the Base Cradle (Refer to associated Product Reference Manual)
2. Once Scanner is binded to base and USB driver is installed Scanner is ready for use.
3. On the following page there is a sequence of ADF rules that must be followed.
4. Scan the barcodes in the following order
 - A. Erase All Rules
 - B. Begin New Rule
 - C. Send all that remains
 - D. Send Function Key [F12]
 - E. Save Rule

ADF - Advance Data Format Rules

Scan the ADF Rules barcodes in the order printed

Erase All Rules



Rule 1


Begin New Rule



Send all that Remains



Send Function Key F12

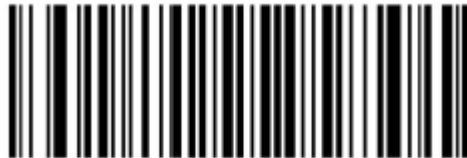

Save Rule

